


## Top Entry Pump Priming

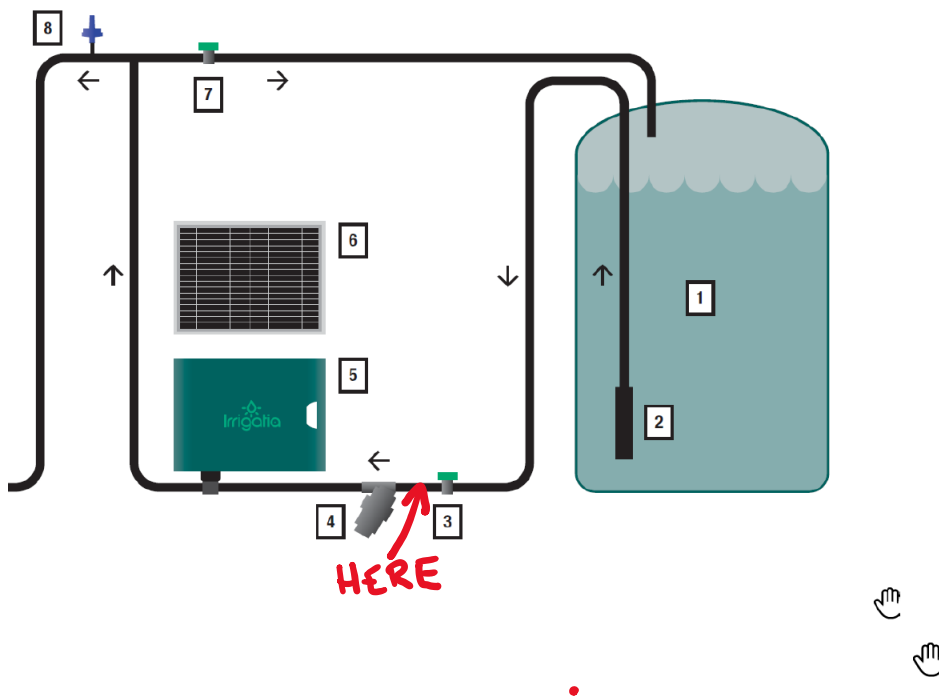

Disconnect the hose from the valve where it says HERE above.

If the valve is opened, water should flow. If it does not it needs priming.

Either

- Connect a hosepipe and turn it on to push all the air from the inlet tube. When the hose is disconnected water should now flow.

Or

- Open the valve, slowly lower the inlet tube back into the tank. When the tube is full from the inside, close the valve and bring back to ground level. Now when the valve is opened water should flow.

When water is flowing properly, re-connect to the pump, open the valve, make sure upstream valves are open so the water has somewhere to go then turn the pump on. It may take a few seconds to clear air from the pump, but should then work normally.